


Powwow ledge

Dis-assembly

Tools required:
Phillips head screw drivers,
Small and medium

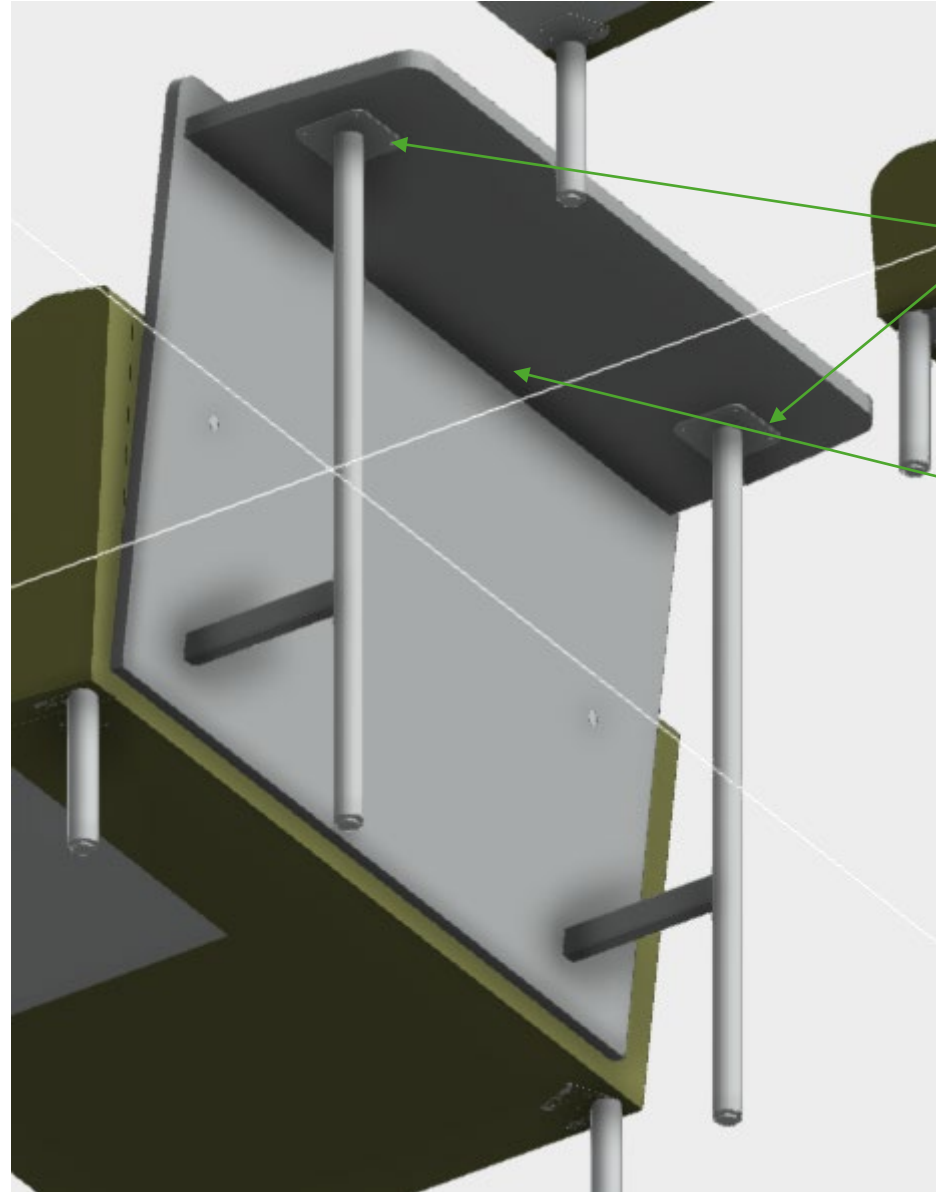


1. Remove bolts underneath
top ledge, 4 each side

2. Remove bolts underneath
top ledge, center support

3. Remove top ledge

Tools required:
Phillips head screw drivers,
Small and medium

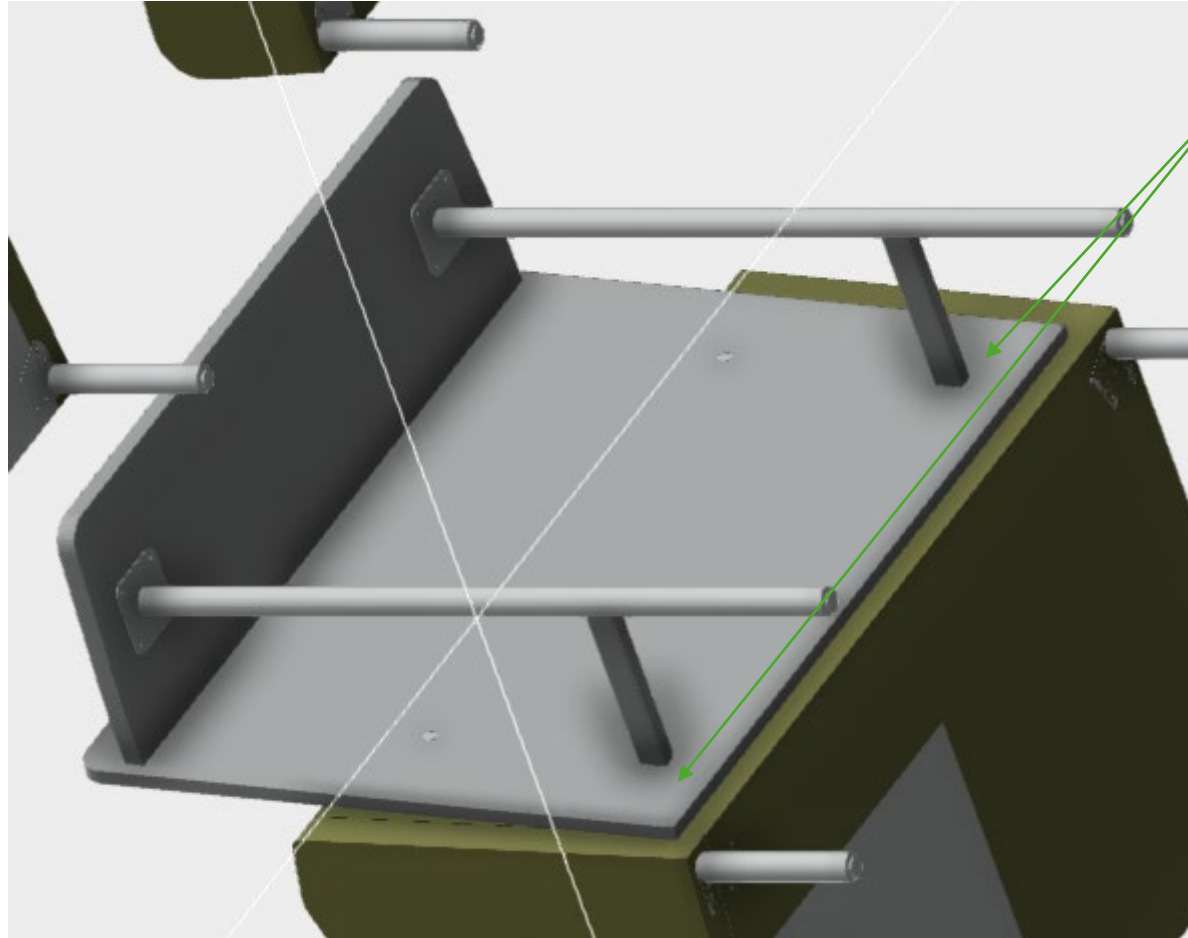

5. Set a cloth on the floor and turn sofa over.
Remove black bottom
to access inner bolts.

6. Remove bolts from
supports and set aside.

7. Remove large back panel

8. Reverse process with
new laminate parts